




MADLOCKER™ Assembly Instructions ML2-2

General Assembly Instructions:

1. Handle with care so that the painted surfaces are not marred.
2. Leave all fasteners, screws, nuts, and bolts loose until the locker is assembled and all screws are installed.
3. Take care to not cross thread fasteners.
4. All fasteners are 1/4-20 x 1/2" Stainless Steel Button Head Screws, except for the leveling hardware and the hardware used to attach the lock handle.

Tools: 5/32" and 1/8" Hex Allen Wrenchs,
3/8" Open End Wrench
7/16" Open End Wrench
3/4" Open End Wrench
8" Adjustable Wrench
Straight Tip Screwdriver
Padding to protect painted surfaces during assembly

Materials: 1/4-20 x 1/2" Button Head,
3/8 x 4" Anchor Spikes 1/2-13 Nut
1/2-13 x 3 1/2" Carriage Bolt
1/4" Flat Fender Washer
1/4-20 x 1" Button Head Socket Cap Screws
10-24 Nylocks Nuts
10-24 x 3/4" Tamper Resistant Screws

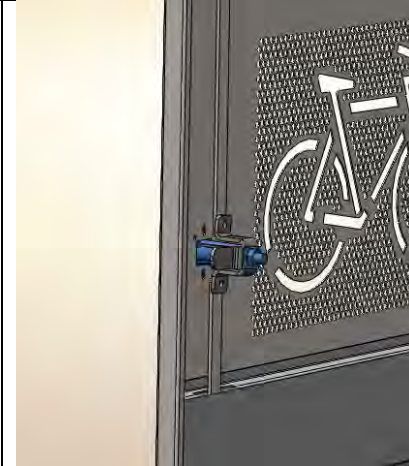

Assemble the door on a padded surface face down. Allow the handle to extend over an edge for ease of assembly.

Insert the bottom lock bar first and then the top. Insert lock through the cover plate, door, and locking cam.

Attach the handle with 10-24 x 1/2" Button Head Socket Cap Screws and 10-24 Nylock Nuts



Attach the hinge with 1/4-20 x 1/2" Button Head Socket Cap Screws


It is important that the hinge is parallel and straight to the front face of the door. The easiest method is to push the hinge down toward the front of the door while tightening the screws. Assemble the appropriate handle with 10-24 x 3/4" Tamper Resistant Screws.


Verify that all door hardware is tight.

Pad Lock/U Lock Handle Assembly




Pop Out T Handle Assembly

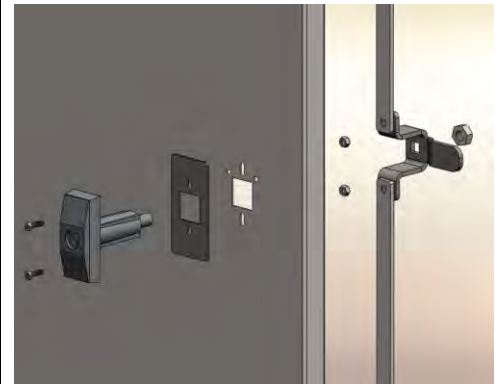

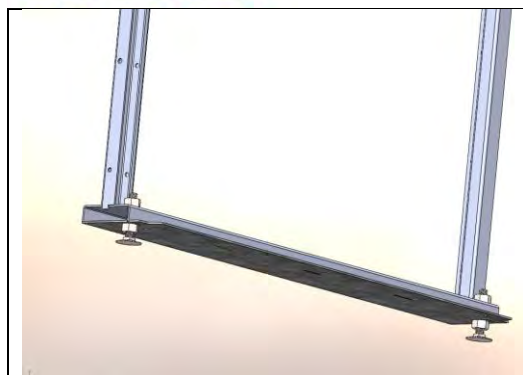


Install the leveling bolts (**1/2"-13 x 3 1/2" Carriage Bolt and 1/2"-13 Nut**), finger tight with the base approximately 1" below the threshold.

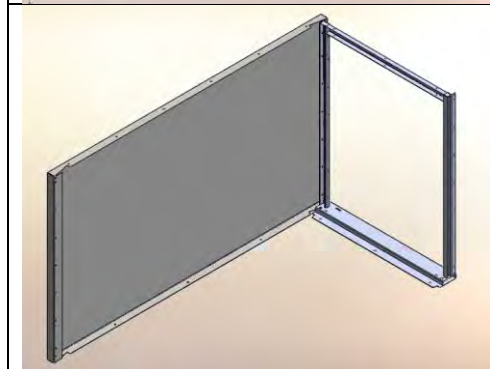



The top of the locker side has 6 holes. Be sure it is right side up.

Attach the door jamb to the side in the position with **1/4"-20 x 1/2" Button Head Socket Cap Screws**.

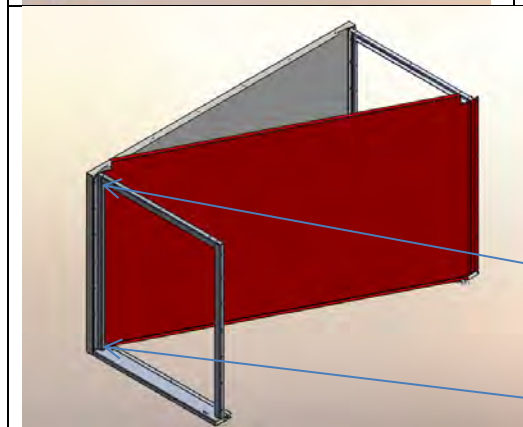

Attach the second door jamb with the partition between the wall and jamb with **1/4"-20 x 1" Button Head Socket Cap Screws**.

Only attach the locker side to the door jamb hinge side by the top and bottom screw at this time. The remaining holes will be used to attach the door hinge.




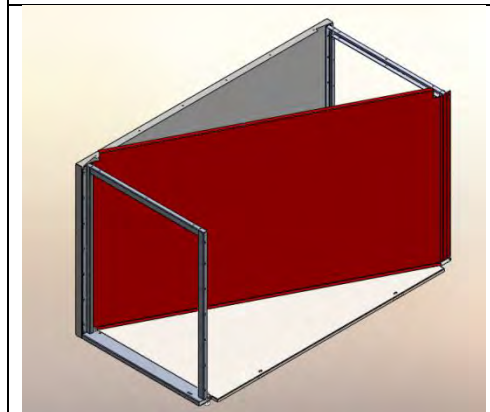
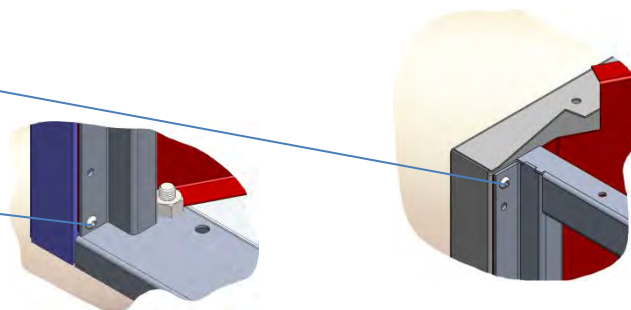



Slide the floor inside the locker from the side and under the partition if the option was purchased. Secure with **1/4"-20 x 1" Button Head Socket Cap Screws** and a **1/4" Fender Washer**.

IMPORTANT: The Floor lies on top of the door jamb flange and wall bottom flange.




MADLOCKER™ Assembly Instructions ML2-2

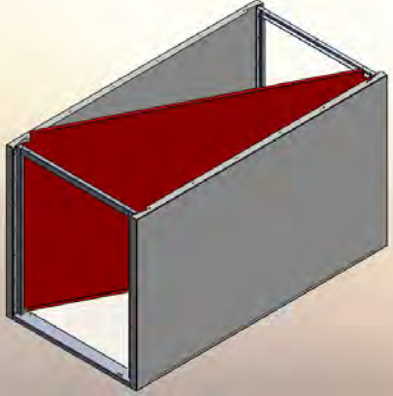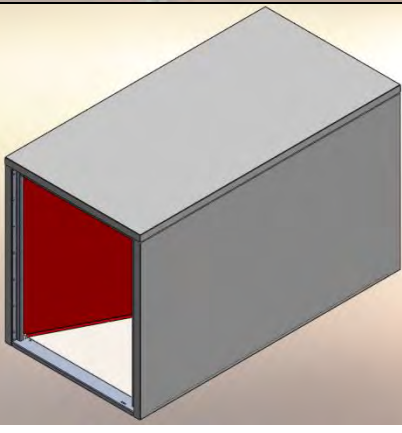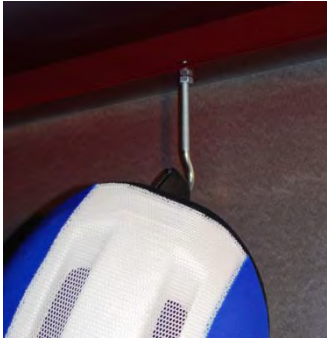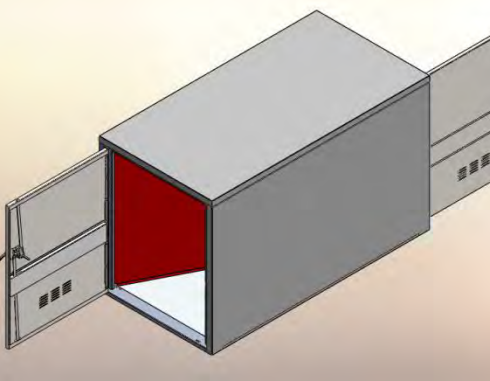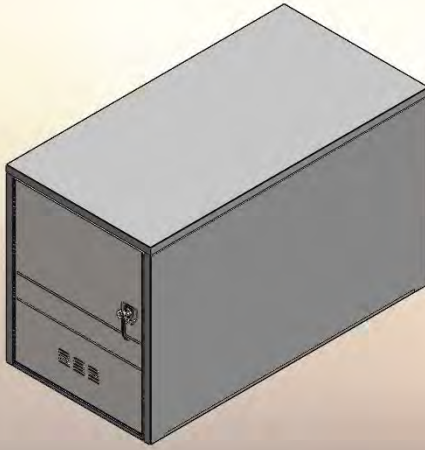	<p>Install the second wall with 1/4"-20 x 1/2" Button Head Socket Cap Screws.</p>
	<p>Install Roof with 1/4"-20 x 1/2" Button Head Socket Cap Screws.</p> <p>Install the accessory hooks and second hole of the roof on the lock and tighten nut.</p> <p>Verify proper wall, side, and back at corners and edges. <i>Tighten all installed to this point.</i></p> <div data-bbox="1015 642 1339 978" data-label="Image">  </div> <p>jamb nut in the side. Insert hook</p> <p>panel alignment <i>fasteners</i></p>
	<p>Install the door with 1/4"-20 x 1/2" Button Head Socket Cap Screws.</p>
	<p>Level the locker by adjusting the bottom nut on the leveling bolts and securing the bolt by tightening the inside nut.</p> <p>Verify that the spacing around the door is nearly equal on all sides, the door swings freely, and the lock and lock bars engage securely.</p> <p>Use Spike Anchors to attach the locker surface through the holes provided in the</p> <div data-bbox="1068 1583 1354 1793" data-label="Image">  </div> <p>to the concrete threshold.</p>



MADLOCKER™ Assembly Instructions ML2-2

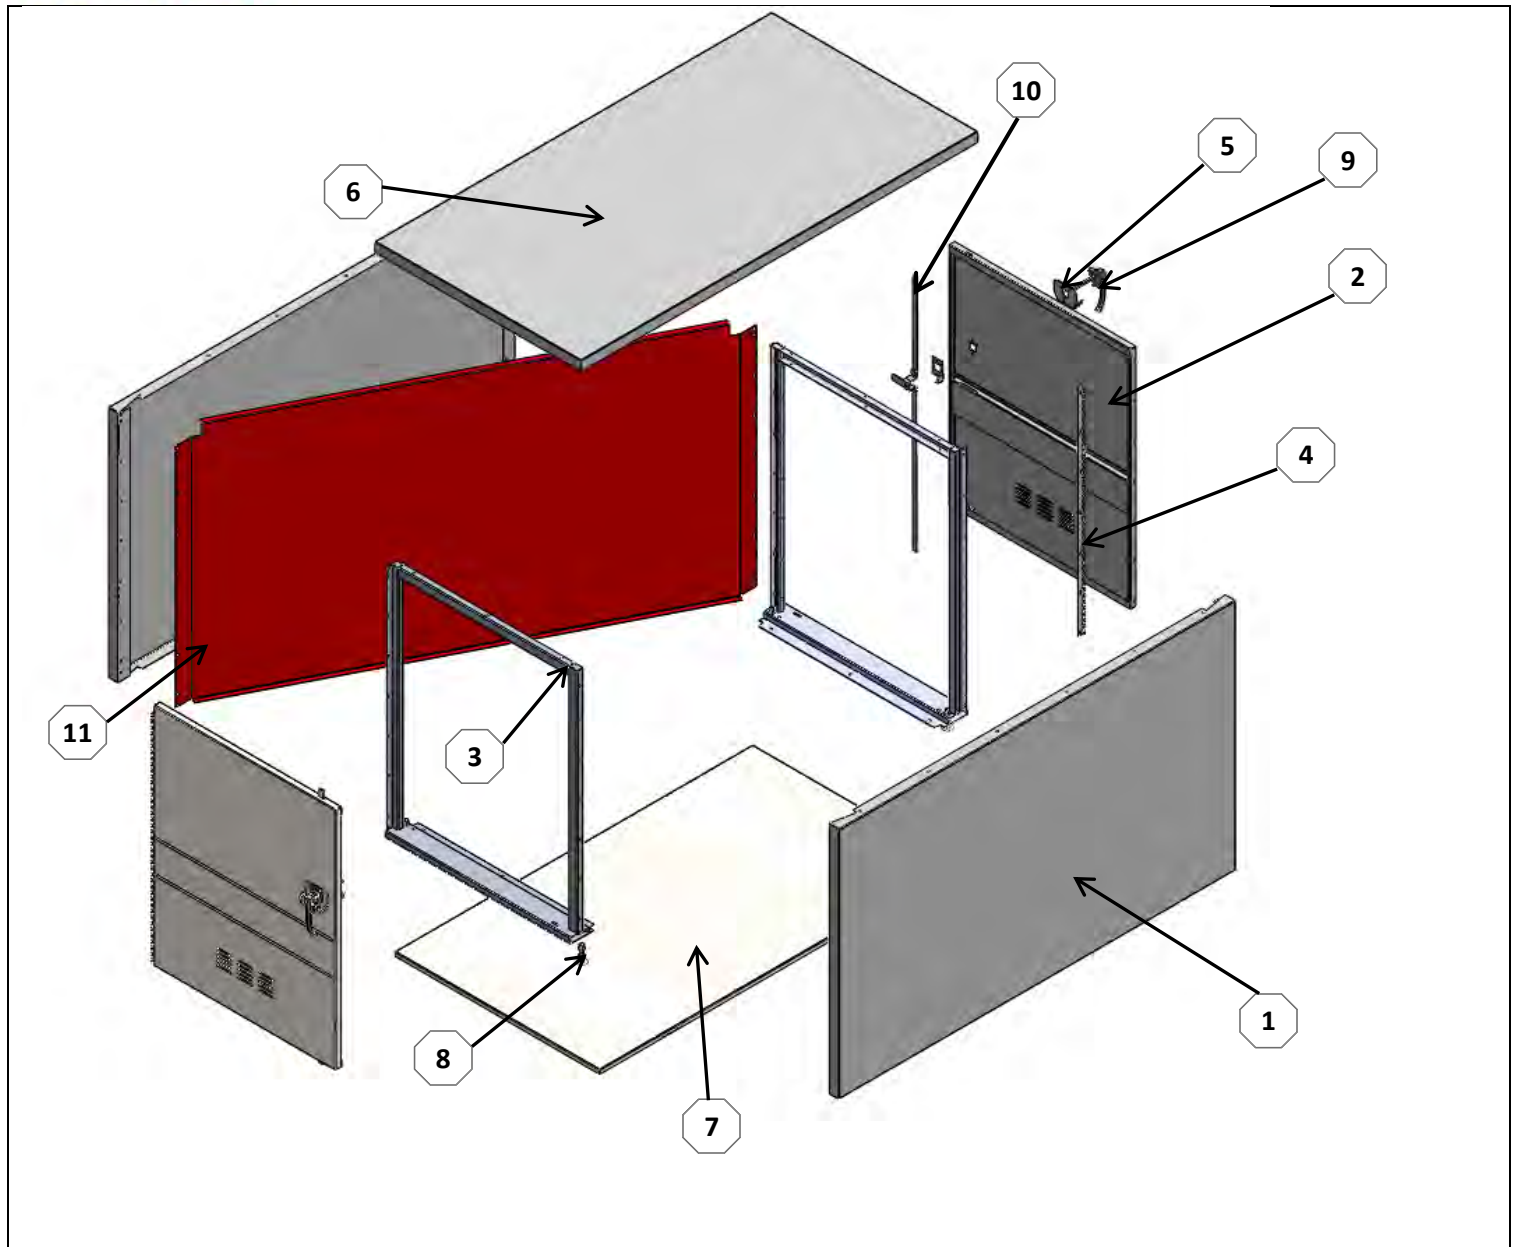

ITEM #	ITEM	QTY
1	ML-S SIDE	2
2	ML-DP DOOR PANEL	2
3	ML-DJA DOOR JAMB ASSEMBLY	2
4	ML-H HINGE	2
5	ML-DUL U LOCK BRACKET	2
6	ML-RP ROOF RANEL	1
7	ML-F FLOOR	1
8	ML-LF LEVELING FOOT	4
9	ML-LH LOCK AND HANDLE ASSEMBLY	2
10	ML-CL CAM AND LOCKING BAR ASSMEMBLY	1
11	ML-P PARTITIAN	1

CONFIDENTIAL DRAWING AND INFORMATION IS NOT TO BE COPIED
OR DISCLOSED TO OTHERS WITHOUT THE CONSENT OF TRILARY, INC.
SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.
©2011 TRILARY, INC. ALL PROPRIETARY RIGHTS RESERVED.
INSTALL BIKE RACKS ACCORDING TO MANUFACTURER'S SPECIFICATIONS.

Distributed in the United States by



5100 West Brown Deer Road
Brown Deer, WI 53208

1-800-236-0112
www.tapconet.com

GSA Contract Holder
GS-07F-5924R
GS-07F-0234U