

CONTROLLER CONNECTION AND PROGRAMMING



Figure 1



Figure 2

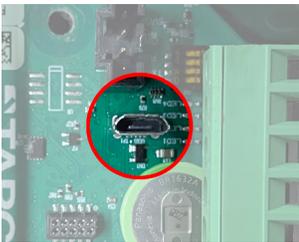


Figure 3



Figure 4

RECOMMENDED TOOLS AND HARDWARE

- Small Screwdriver
- Micro-USB Cable
- DB-9 Serial Cable
- Laptop with Windows Software

Note: If using a micro-USB cable, follow the section immediately below. If using a DB-9 Serial Cable, follow that corresponding section.

SYNC THE CONTROLLER TO THE COMPUTER WITH A MICRO-USB CABLE.

1. Access the micro-USB port on the controller.
 - a. Locate the TAPCO® radio or lid and remove the four fasteners (if applicable). See Figure 1.
 - b. Remove the radio faceplate or lid to access the IWS controller underneath. See Figure 2.

Note: The micro-USB port on the radio faceplate is for the TAPCO® radio, not the TAPCO® IWS controller. One is unable to program the IWS controller through the radio micro-USB port.

NOTICE

- The ribbon cable, connectors, and wires can be damaged if mishandled.
- Handle these items with care to prevent loose connections.

2. Insert the micro-USB cable into the controller's port and the other end to your laptop. See Figure 3.
3. Follow the instructions on <https://www.tapconet.com/config-tool> and/or the section(s) in the appropriate system installation guide on how to download and install software and drivers. The Website includes a video tutorial, a configuration tool, drivers, and a software support library.

Note: Drivers are needed for the DB-9 Serial Cable connection but should not be needed for the micro-USB connection.

SYNC THE CONTROLLER TO THE COMPUTER WITH A DB-9 SERIAL CABLE.

1. Connect the DB-9 serial cable from the TAPCO IWS radio/controller to your laptop as shown in Figure 4.
2. Follow the instructions on <http://www.tapconet.com/config-tool> and/or the section(s) in the appropriate system installation guide on how to download and install software and drivers. The Website includes a video tutorial, a configuration tool, drivers, and a software support library.

**For technical support, call TAPCO® at 800-236-0112 or email
customerservice@tapconet.com.**

8 am–5 pm (CST) Monday through Friday

For faster service, have the serial number on the TAPCO® cabinet label ready.



 (800) 236-0112  TAPCOnet.com